

GF-HID


HID Proximity Card Reader Module for GF Entrance Panel

- INSTRUCTIONS -


The GF-HID is an Access Control module for the GF Entrance Panel that contains an HID ProxPoint® Plus Card Reader. This module installs into the entrance panel and cosmetically matches, so a separate card reader does not need to be installed. The card reader provides electronic access to a building through the standard Access Control system, which is not supplied by Aiphone.

INSTALLATION:


- 1. Install GF-HID card reader module in the GF entrance panel. (Install in a lower position for ease of access).
- 2. GF-HID will snap into the GF-2F or GF-3F frame.
- 3. Secure wire connections as shown on wiring chart.
- 4. Cut any unused wire so that bare wires are not exposed.
- 5. Refer to standard GF Installation Manual for complete system information. No additional information pertaining to the Access Control system is provided by Aiphone.

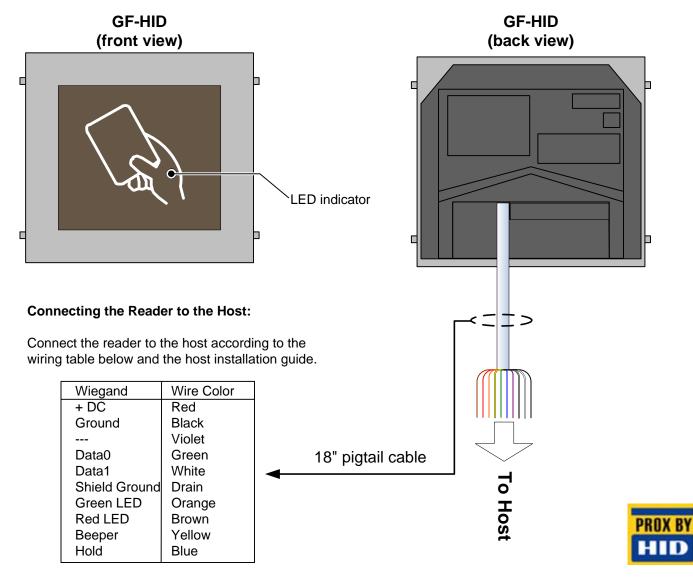


TYPICAL LAYOUTS:

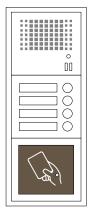




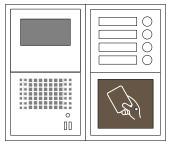

Video with 4 buttons and card reader

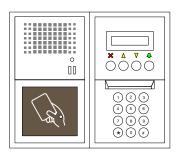

Digital audio with card reader

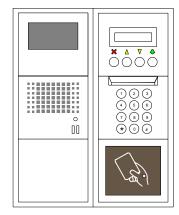

Digital video with card reader

TESTING AND OPERATION:

- When power is applied to the reader, the LED will flash green three (3) times while the beeper beeps simultaneously. The LED will then turn red. This indicates that the microcontroller is operating properly.
- Present an ID card to the reader. (Hold card directly in front of reader module.) The LED will momentarily turn green while the beeper beeps once, indicating that the card was read successfully.

SPECIFICATIONS:

Power Source: 5.0 – 16.0 VDC

Absolute Max. Voltage: 18 VDC
Peak Current: 80 mA
Avg. Current 5V or 12V: 20 mA

Terminations: Color-coded pre-wired pigtails

Wiring Distance: 500'

Dimensions (H x W x D): 3 3/4" x 4 3/16" x 1 7/8"

Operating Temperature: -10° ~ 60° C / 14° ~ 140° F

FCC WARNING:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference that may cause undesired operation.

For proper regulatory compliance, the drain wire should be disconnected at the power supply end of the cable.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The Reader is intended to be powered from a limited power source output of a previously certified power supply.

Aiphone Communication Systems 1700 130th Ave. N.E. Bellevue, WA 98005 (425) 455-0510 FAX (425) 455-0071

TOLL FREE TECHNICAL SUPPORT: (800) 692-0200 TOLL FREE FAX LINE: (800) 832-3765 E-MAIL: tech-serv@aiphone.com

